



Installation Manual

Siren



Table of Contents

GETTING STARTED	2
UNPACKING.....	2
MOUNTING.....	2
MAINTENANCE.....	2
TECHNICAL SPECIFICATIONS	3
SAFE DISPOSAL	3
ACTIVATION AND TEST IN THE ALARM SYSTEM	3
TESTING THE SIREN.....	4

Getting started

Congratulation with your new SuperSail product. We hope that you will be satisfied with the product and we are always available to give support in case you need it.

You can contact us at: support@super-sail.dk

Regards,

SuperSail Support Team

Please read the whole installation manual before starting the installation.

Unpacking

Before you start using the unit you must ensure that the packaging has not been broken or have been injured during transport and that the product is complete and without any visible sign of damage or strained. If this is not the case please contact SuperSail before using the product.

Mounting



The Siren must be placed at a suitable place indoor.

The Siren must be mounted using screws or with for instance heavy two-sided tape.

If the Alarm system is connected to the SuperSail Alarm Connection Box, the two wires from the Siren is connected to the 2 terminal clamps for Output #1. Please refer to the Installation Manual for the Connection Box, which can be found at: www.super-sail.dk/app-support

If the Alarm system is not connected via the Connection Box, the two wires from the Siren are connected as follows:

From the Alarm system – wire color	Connected to the Siren – wire color
Light Blue (Output #1)	Red (+12V)
White (Signal GND)	Black (GND)

Maintenance

The Siren is maintenance free. Repairs should be carried out at an authorized service center.

Cleaning can be carried out with a soft cloth wrenched in lukewarm water.

Cleaning detergent containing solvent can harm the unit.

Technical Specifications

Color	Black/Red/White
Electrical	12 Volt
Sound	120 dB
Size	52 x 52 x 50 mm
Weight	56 g

Changes may apply.

Safe Disposal




Should not be disposed a domestic waste.

Electronic equipment should be disposed according to the local regulations for electronic and electronically equipment.

Activation and test in the Alarm system

When the Siren is correctly installed and tested, it should be activated in the Alarm system..

This is done in the SuperSail mobil app, where it is possible in the Alarm menu to specify that a Siren is connected to Output #1.

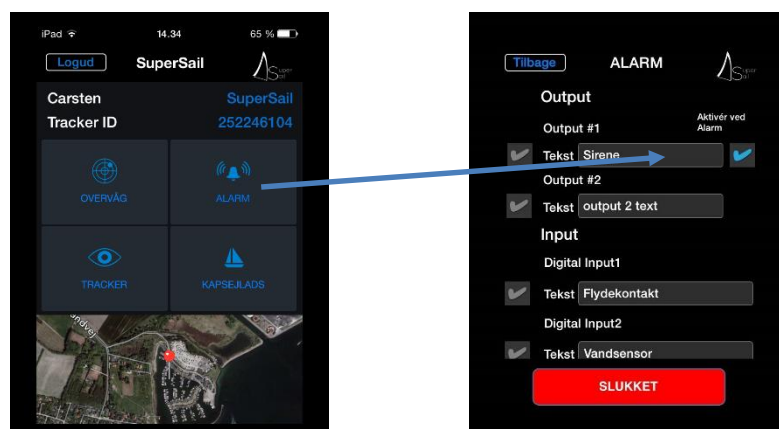

The Siren is activated by typing a text in the Text field, which identifies the Siren. Hereafter the

Sirenen aktiveret ved at skrive en tekst i Tekstfeltet der identificerer sirenen. Hereafter the Siren is activated by ticking off the field "Activate on Alarm", which enables the Alarm system to activate Output #1 if one of the below alarms are activated.

The Siren is activated if the following alarms are activated:

- Maximum Movement, which is activated if the boat is physically moved from the position where the alarm was activated.
- Movement Sensor, which indicates that a person is inside the boat.
- Door Sensor, which indicates that a door or window is opened.
- Input #1, which can be used for Outboard Engine alarm or a wired sensor which must activate the Siren when activated.

Other alarm will not activate the Siren when activated.

When the Siren is activated, it will remain activated as long as one of the above alarms are active, or 5 minutes after the last alarm is activated.

If the Alarm system is turned off, the Siren will stop immediately.

Testing the Siren

The Siren can be tested by ticking off the field next to the text field for Output #1, which forces the Siren to activate. The Siren stops when the field are ticked off again.

It is furthermore recommended to test the Siren by turning the Alarm system on, and activating one of the above alarms.